



SEATING



www.mce.md.gov



Bel Air

(Without Headrest - shown)
Also available in Quick Ship!



BEL AIR CHAIR FEATURES

Maximum support

For maximum support, sit as far back in the seat as is comfortable and lean against the backrest. To achieve the correct height, your feet should be flat on the floor.

Seat height adjustment

To lower height while seated, lift the lever at the right front of the seat. To raise the height, remove your weight from the seat while lifting the lever.

Lumbar adjustment

For lumbar adjustment, grasp the levers on each side of the back and raise or lower to the desired position.



Arm height adjustment

To adjust the arm height, push the button in and then raise or lower the arm.

Back lock adjustment

To lock the back at a given angle, first recline to the desired position and then pull up on the lever. To resume free float, push down on the lever.

Tilt tension adjustment

An adjustment can be made to the chair's seat tilt tension with the knob directly under the front of the seat. To increase the tension of the tilt, turn the dial clockwise. To decrease tension, turn the dial counter-clockwise.



BEL AIR

The Bel Air provides a breathable mesh backing that allows for air ventilation and natural cooling. Paired with a highly cushioned seat, it offers the ultimate in comfort. Additional features include an easy-to-use lumbar adjustment, height adjustable arms and contoured polyurethane pads.

Dimensions

Overall	27 ½"W x 25"D
Seat	21 ⅝"W x 19 ½"D
Seat ht. range	18" - 21"
Headrest	14 ½"W x 7 ½"H
Headrest adj. range	3"

Item No. 122017 Without headrest, (shown) **\$523.00***

Item No. 122018 With headrest **\$592.00***

FABRIC & FRAME COLOR: BLACK

*Available in Quick Ship



For more information:

Contact Customer Service 410-540-5454
www.mce.md.gov